




# UNITED MOULDERS LTD

## UML- 5 Automatic Inflator Re-arming Instructions

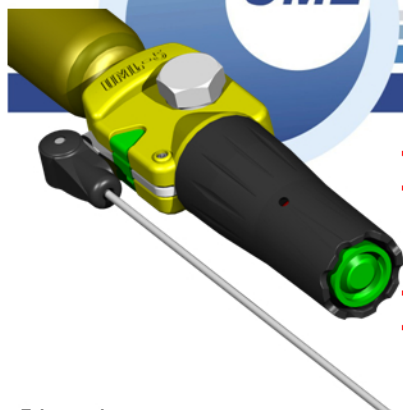

- Do not detach the inflator from the lifejacket.
- Before commencing the re-arming procedure ensure you have the correct re-arming kit with the correct size of CO<sub>2</sub> cylinder, and that the lifejacket is dry.
- Keep away from fluids.
- Ensure the automatic cartridge in the re-arming kit is within its Replace By Date.

### Step 1

Remove the pierced CO<sub>2</sub> cylinder by turning it anti-clockwise and discard it in an environmentally friendly manner.



### Step 2

Unscrew the automatic cartridge by turning it anti-clockwise and discard it in an environmentally friendly manner. Replace it with the new cartridge which will have the green indicator in place, by turning it clockwise. Tighten up hand tight.

### Step 3

If the unit has been manually activated, push the lever back into its slot and clip the new manual indicator in place.




### Step 4

Ensure the black CO<sub>2</sub> cylinder seal is fitted correctly.

### Step 5

Ensure the CO<sub>2</sub> cylinder cap has not been pierced and then screw it clockwise into the UML- 5 Inflator. Tighten up hand tight.

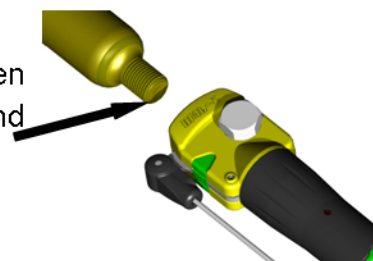

- Re-pack the lifejacket according to the lifejacket manufacturers instructions.
- When not in use store the lifejacket in a cool, dry place out of direct sunlight.